


# Hidden Deck Fasteners and “Grooved” decking now available

Best prices in Atlanta.



**We are now supplying Ipe Clip® fasteners with stainless steel washers molded inside for added strength!!!**

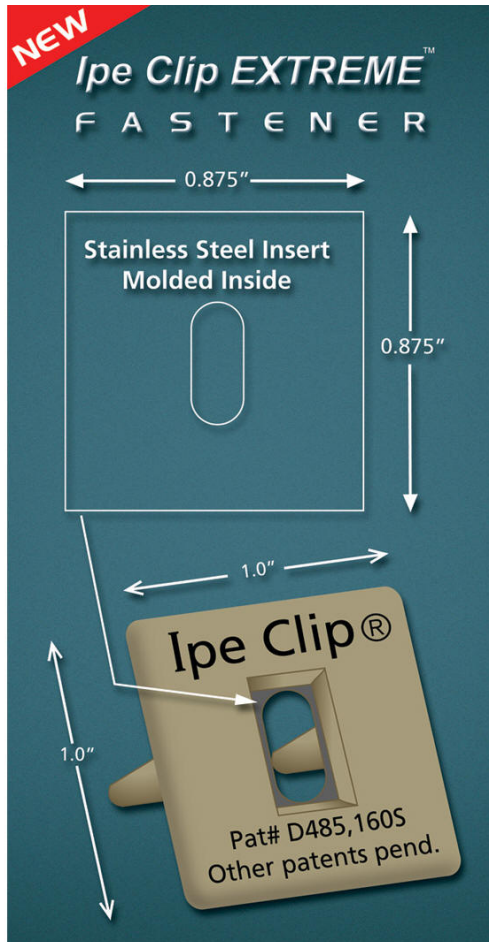

Each complete IPE CLIP® **Extreme**™ fastener system comes with the following components for **100 sf** of decking:

- (175) IPE CLIP® **Extreme**™ Hidden Deck Fasteners
- (190) Stainless steel #8, 2” Torx drive screws
- (1) 1/8" high speed drill bit
- (1) #1 Torx drive screwgun tip
- (12) 3/8" Tapered Ipe plugs

## **IPE CLIP INSTALLATION:**

- Face screw the first deck board and use the wood plugs provided
- Insert Ipe Clip into the edge of deck board
- Install screws at a 45 degree angle & slightly countersink in the center of the Ipe Clip
- Fasten board on each joist using one clip and one screw per joist
- Slide the next board into the clips from previously fastened deck board and insert next clip.
- Repeat procedure.

## **WOOD PLUG INSTALLATION:**

- Drill 3/8” diameter hole approximately 1/4” deep and pilot hole through decking.
- After screwing, use Gorilla Glue or Elmers same poly glue.
- Insert plug and tap with hammer.
- Glue dries, chisel away excess plug and sand smooth – 80 grit.